

**— A Definite Difference!**


ISO9001 Certified

XEBEC products are manufactured in a plant certified by ISO 9001, the international standard of quality control and assurance.

Patent Pending

# XEBEC®


## Heat-Resistant Ceramic Abrasives

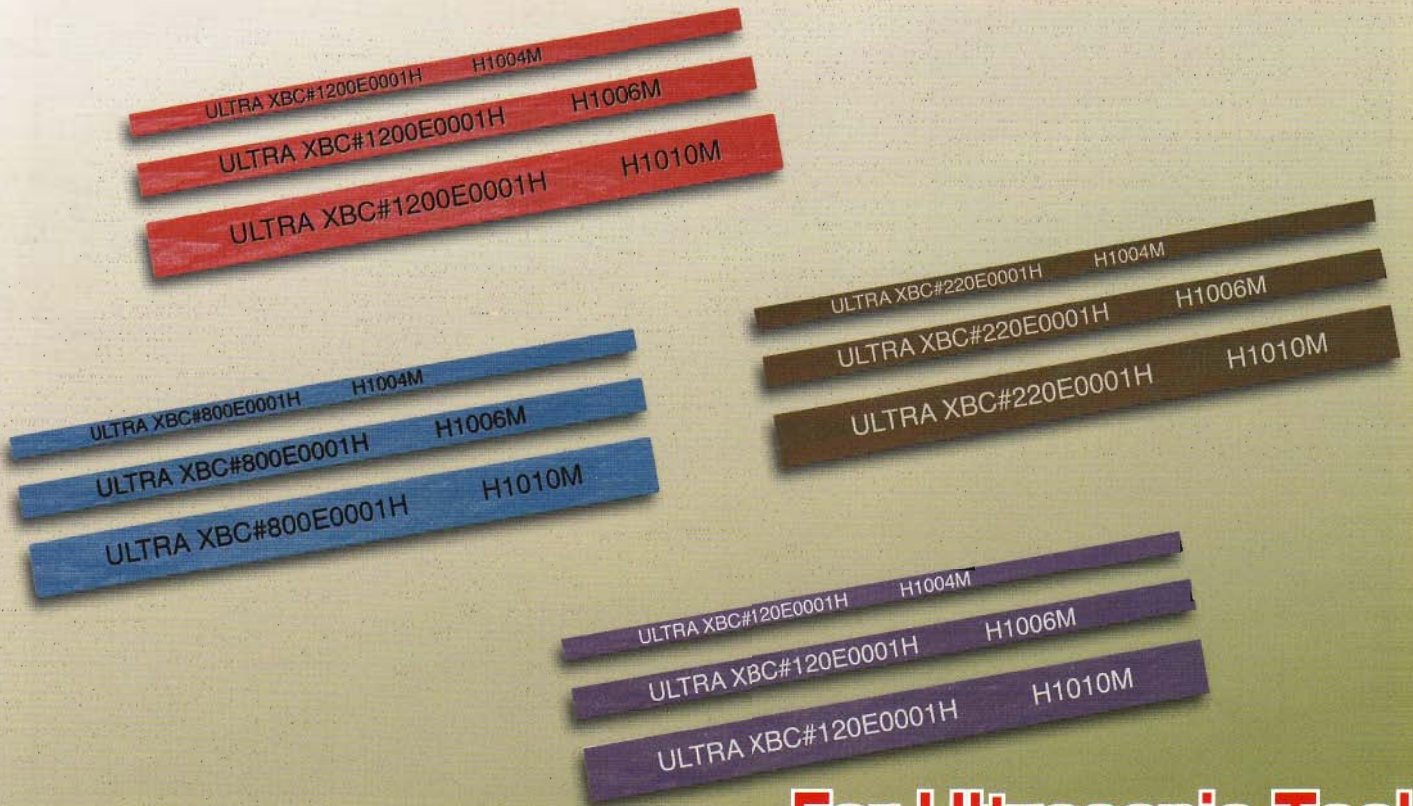

**For Ultrasonic Tools**

**Excellent Heat Resistance!**

**Doesn't Soften! Outstanding efficiency!**

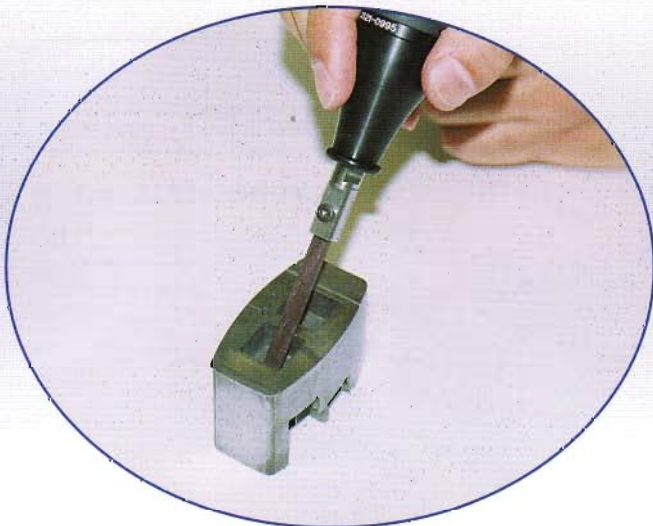

- XEBEC has successfully increased the resistance temperature from 100°C to 200°C in its Heat-Resistant Ceramic Abrasives.
- Adding to the same performance of the Meister Finish (doesn't break, doesn't crack, excellent sharpness), their durability has been enhanced for prolonged use with Ultrasonic tools.
- Ideal for removing EDM scales.
- Can be used to polish deep slits of ribs, at full length.

## ● Lineup

Grit	color	Thickness (mm)	Width (mm)	Length (mm)	Code No.
Equivalent to #1200	Red	1	4	100	HR-1004M
		1	6	100	HR-1006M
		1	10	100	HR-1010M
		2	4	100	HR-2004M
		2	6	100	HR-2006M
		2	10	100	HR-2010M
Equivalent to #800	Blue	1	4	100	HB-1004M
		1	6	100	HB-1006M
		1	10	100	HB-1010M
		2	4	100	HB-2004M
		2	6	100	HB-2006M
		2	10	100	HB-2010M
Equivalent to #220	Dark Brown	1	4	100	HD-1004M
		1	6	100	HD-1006M
		1	10	100	HD-1010M
		2	4	100	HD-2004M
		2	6	100	HD-2006M
		2	10	100	HD-2010M
Equivalent to #120	Violet	1	4	100	HV-1004M
		1	6	100	HV-1006M
		1	10	100	HV-1010M
		2	4	100	HV-2004M
		2	6	100	HV-2006M
		2	10	100	HV-2010M

## Precautions in use

### [When Using with an Ultrasonic Tools]

- Check the appropriate output. The tool may break or generate heat when the output is too large.
- Check the appropriate length. If the length is inappropriate, the tool may not oscillate, or concentrated output may result in heat generation.
- Clamp securely. Poor clamping may concentrate output, resulting in excessive heat generation.
- Polishing performance may vary depending on the structure and method of the clamp in use; read carefully the instruction manual of your ultrasonic tool.

### [Protection]

- Wear protective eyeglasses, gloves and mask during use.



### Warning

Please always follow the above instruction and precautions in order to use the tools safely.

Please visit our homepage for details. ———— URL <http://www.xebec-tech.co.jp>

**XEBEC**<sup>®</sup> XEBEC TECHNOLOGY CO.,LTD.

Head Office 4-3-3 Koujimachi, Chiyoda-ku, Tokyo, Japan  
 Phone.+81-3-3239-3481 FAX.+81-3-5211-8964  
 URL <http://www.xebec-tech.co.jp>  
 E-mail [info@xebec-tech.co.jp](mailto:info@xebec-tech.co.jp)

Factory and R/D 4061-1 Minami-Minowa-mura, Kamiina-gun, Nagano, Japan  
 Phone.+81-265-73-1523 FAX.+81-265-73-0375

your order: